


Honeywell Configuration Bar Codes


Please scan the codes in the numbered order.

1. Enter Program Mode

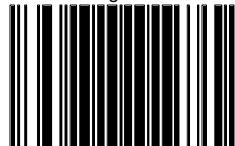


999999

6. Configuration Code 4

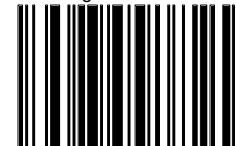


818440

2. Internal Low Speed USB Defaults

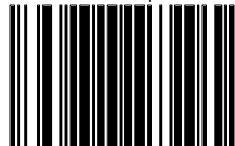


999941

7. Exit Program Mode

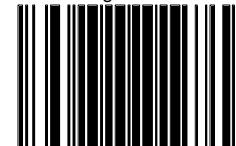


999999

3. Configuration Code 1

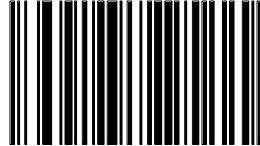


8075320

4. Configuration Code 2

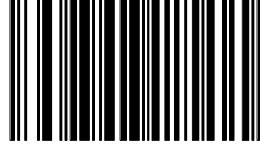

81601520

5. Configuration Code 3

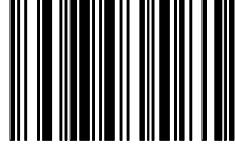

816680